


BRS-61

LIGHTWEIGHT BACKPACKING STOVE SYSTEM

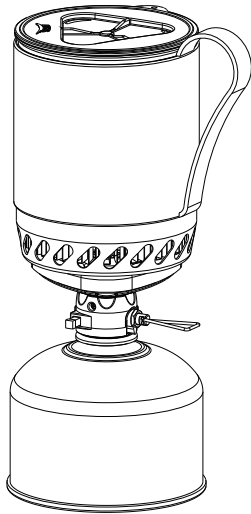

INSTRUCTION MANUAL

Thank you very much for purchasing and using BRS products.

This product is a professional outdoor product, please be sure to read the instructions carefully before use.

1


Matters needing attention

1. Please keep the stove dry, clean and avoid corrosion, otherwise it is not covered by the warranty.
2. The discoloration of the furnace surface and bracket during use is normal.
3. Please check whether the O-type sealing rubber ring in the connection between the valve body and gas tank exists and is intact before use.
4. Keep the connection between the valve body and the gas tank clean and dry.
5. Be sure to store the stove and the gas tank separately after use.
6. There will be a small amount of gas leakage during the installation and disassembly of stoves and gas tanks. Do not install and disassemble in places with open flames or no air circulation.

Operation guide

1) Connect the stove to the gas tank

1. Take the oven head and gas tank from the pot.
2. Make sure the furnace head valve is closed (close the valve clockwise)



3. Connect the gas tank to the stove head and tighten it.



1) Install POTS and pans

1. Install the bottom of the pot on the stove head and turn clockwise until the pot does not move.



2

SAFETY WARNING

1. This product is used in outdoor or ventilated environment. It is strictly prohibited to use in tents, cars, rooms or other closed environments to avoid carbon monoxide poisoning.
2. Avoid using in the hot sun or other high temperature environment.
3. Stop using immediately if air leakage is found.
4. The structure of this product is precise, do not transform it by yourself to avoid danger.
5. It is strictly prohibited to disassemble and install the gas tank when fire is not extinguished, and it is strictly prohibited to disassemble and install the gas tank near the open fire.
6. Keep away from flammable and explosive materials when using.
7. It is forbidden to move the stove at will in use.
8. Children under 12 years old should not use this product alone.

SERVICE

- If you have any questions, please contact: hello@tpxgear.com
- If necessary, send the stove together, in a suitable packing, without the gas cartridge to repair service

IMPORTER

TPX Gear s.c.
Ks. Józefa Czyża 23/2
35-506 Rzeszów
Poland

hello@tpxgear.com


PRODUCER

Yongkang Jiedeng Outdoor
Products Co., Ltd.
6-1# Fengshan Zui, Longshan Town,
Yongkang, Zhejiang, China


4

3) Light the burner

1. Put the stove stable, add water to the pot, the capacity does not exceed 0.5L, cover.

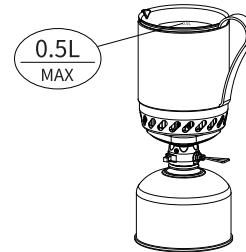

2. Open the valve switch counterclockwise and press the ignition button repeatedly until the ignition is successful.

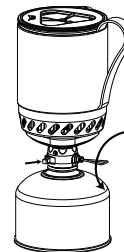

3. Rotate the valve to adjust the required flame size.


4) Turn off the stove

1. Turn off the valve switch clockwise, extinguish the flame, and place it for 5 minutes to completely cool the stove.
2. Turn counterclockwise to remove the pan.
3. Then unscrew the stove head from the gas tank.
4. Put the gas tank and stove head into the pot carefully, and finally cover the lid.

3

BRS-61

LEKKI SYSTEM KUCHENKI TURYSTYCZNEJ

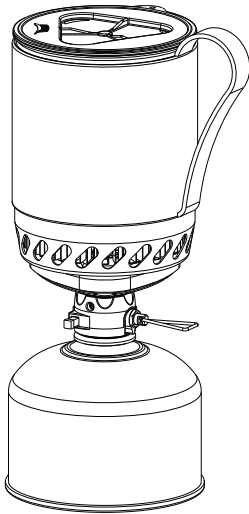

INSTRUKCJA UŻYTKOWANIA

Dziękujemy za zakup produktów BRS.

Ten produkt jest profesjonalnym produktem do użytku na zewnątrz, prosimy o dokładne zapoznanie się z instrukcją przed użyciem.

1


Informacje wymagające uwagi

1. Utrzymaj urządzenie w stanie suchym, czystym i unikając korozji, w przeciwnym razie nie jest on objęty gwarancją.
2. Odbarwienie powierzchni urządzenia i wspornika podczas użytkowania jest normalne.
3. Przed użyciem należy sprawdzić, czy gumowy pierścień uszczelniający typu O w połączeniu między palnikiem a zbiornikiem gazu jest zamontowany i nienaruszony.
4. Utrzymuj w czystości i suchości miejsce połączenia zaworu korpusu ze zbiornikiem gazu.
5. Po użyciu należy przechowywać urządzenie i zbiornik gazu oddzielnie.
6. Podczas montażu i demontażu urządzenia i zbiornika gazu może dojść do niewielkiego wycieku gazu. Nie należy montować ani demontować urządzenia w miejscach z otwartym ogniem lub bez cyrkulacji powietrza.

Obsługa urządzenia

1) Połączenie urządzenia ze zbiornikiem gazu

1. Wyjmij palnik kuchenki i zbiornik gazu z garnka.
2. Upewnij się, że zawór palnika jest zamknięty (zamknij zawór zgodnie z ruchem wskazówek zegara)



3. Podłącz zbiornik gazu do palnika i dokręć.



1) Montaż garnka

1. Zamontuj spód garnka na palniku kuchenki obracając go zgodnie z ruchem wskazówek zegara, aż garnek nie będzie się ruszał.



2

BEZPIECZEŃSTWO

1. Ten produkt jest przeznaczony do użytku na zewnątrz lub w wentylowanym otoczeniu. Surowo zabrania się używania go w namiotach, samochodach lub zamkniętych pomieszczeniach, aby uniknąć zatrucia tlenkiem węgla.
2. Unikaj używania go w mocnym słońcu lub innym otoczeniu o wysokiej temperaturze.
3. Natychmiast wyłącz urządzenie, jeśli wykryjesz nieszczelność.
4. Produkt jest wykonany precyzyjnie, nie przerabiaj go samodzielnie, aby uniknąć niebezpieczeństwa.
5. Surowo zabrania się demontażu i montażu zbiornika gazu, gdy ogień nie jest ugaszony, a także surowo zabrania się demontażu i montażu zbiornika gazu w pobliżu otwartego ognia.
6. Trzymaj z dala od materiałów łatwopalnych i wybuchowych.
7. Nie przesuwaj urządzenia podczas gotowania.
8. Dzieci poniżej 12 roku życia nie powinny używać tego produktu bez nadzoru osoby dorosłej.

SERVICE

- W razie pytań prosimy o kontakt: hello@tpxgear.com
- W razie potrzeby urządzenie należy wysłać do serwisu w komplecie, w odpowiednim opakowaniu, bez naboju gazowego.

IMPORTER

TPX Gear s.c.
Ks. Józefa Czyża 23/2
35-506 Rzeszów
Poland

hello@tpxgear.com


PRODUCENT

Yongkang Jiedeng Outdoor
Products Co., Ltd.
6-1# Fengshan Zui, Longshan Town,
Yongkang, Zhejiang, China


4

3) Rozpalanie palnika

1. Ustaw urządzenie stabilnie, wlej wodę do garnka, pojemność nie powinna przekraczać 0,5 l, przykryj.

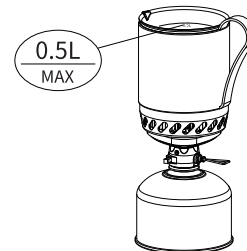

2. Otwórz zawór przeciwnie do ruchu wskazówek zegara i naciśnij przycisk iskrownika kilkakrotnie, aż do uzyskania zapłonu.

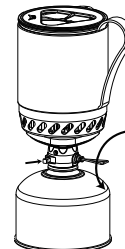

3. Obracając zawór dostosuj wielkość płomienia.

4) Wygaszanie palnika

1. Przekręć zawór zgodnie z ruchem wskazówek zegara aby zgasić płomień i odstaw urządzenie na 5 minut, aby całkowicie wystygło.
2. Przekręć garnek przeciwnie do ruchu wskazówek zegara, aby go odkręcić.
3. Następnie odkręć palnik kuchenki od zbiornika gazu.
4. Ostrożnie umieść zbiornik gazu i palnik w garnku, a na koniec przykryj pokrywką.

3